

UNITECH ENERGY METER PROGRAMMING

1. Selection of Auto Mode & Manual Mode
2. Press Enter Key for 4 second Vase Versa

To go energy meter in programming check mode

1. Press Enter + Down Button till digital display = 0000.PS
2. Press Scroll Down button & see digital display = 9000.PS (9 Flickering)
3. Press Scroll Down button & see digital display = 1000.PS (Till 1 Flickering)
4. Press Enter button 4 times & see digital display = YES.PS
5. Press Scroll Down button & see digital display = 415.0PP
6. Press Scroll Down button & see digital display = 415.0PS
7. Press Scroll Down button & see digital display = 300.0CP
8. Press Scroll Down button & see digital display = 5.000CS
9. Press Scroll Down button & see digital display = 9600.br
10. Press Scroll Down button & see digital display = non .Pr
11. Press Scroll Down button & see digital display = 010 . d
12. Press Scroll Down button & see digital display = no .Eb
13. Press Scroll Down button & see digital display = no .d6
14. Press Scroll Down button & see digital display = no .rH
15. Press Scroll Down button & see digital display = Yh .Et
16. Press Scroll Down button & see digital display = - - - .PS
17. Press Scroll Down button & see digital display = YES .SU

To go energy meter in programming mode

1. Press Down Key + Enter Key both together for 2 sec.
2. Press Down Key till first digit change from Zero To One
3. Press Enter Key to shift blink digit to right (Here 4 times)

Press Down Key to yes

PS = Password is 1000 by default factory set

PP = PT primary 415

PS = PT secondary 415

CP = CT primary

CS = CT secondary

BR = Baud Rate

PR = Parity

ID = Device id

(By Mr. Adeeb Raza)