BIG AUTOCLAVE CONTROLLERS DEFAULT SETTINGS

Parameters Set By Mr. Adeeb Raza After Repairing On Dated 21 April 2007

| Controller 1 | F & B XMA5300 |
|---|---|
| Used As PID T | emperature Controlle |
| [1] The State of the Control of the | 1 = 120C Valve Reopen 2 = 150C Over Temp set at 0.5 |
| I = (150 to 200) D = 00 set at 8 | set at 200 |
| QF = MCB | QM = 3 Ø On/Off |
| 5 Nos. | |

| Controller 2 | F & B XMT5300 |
|---------------|--------------------------------------|
| Used As Tem | perature & Time Controller |
| Setting Alarm | 1 = 45 C Valve Open for Air Inlet |
| Setting Alarm | 2 = 135C for Balancing |
| Setting Time | Alarm 3 = 00:45 Minute for Balancing |
| Setting Time | Alarm 4 = 59:59 Minute for Cooling |

| KM = Contactor 3 Ø | KA = Relay | |
|--------------------|------------|-----|
| 3 Nos | 8 Nos. | - 9 |

| Controller 3 | F&B | XMT5400P |
|---|------------|-----------------------------|
| Used As Press | sure Con | troller |
| Setting Alarm | 1 = 1.35 N | /IPa - Balancing |
| THE RESIDENCE OF THE PROPERTY | | MPa - Door Open Safety |
| | | MPa - Air Inlet Valve Close |
| To \$10,000,000,000,000,000,000,000,000,000, | | Apa - Over Pressure Safety |

| Electromagnetic Relay with Base |
|---------------------------------|
| 8 Nos. |