## AIRTEL INTERNET CONNECTION

THROUGH ACCESS ROUTER HUAWEI MODEL AR161

HUAWEI MODEL AR161 HAVING ONE WAN GE4 & FOUR LAN PORT GE0, GE1, GE2, GE3



From POE Vedio Internet

Our(STATIC IPs are )18 19 20 21 22 & Default gateway 182.75.17.17

### **D-Link WiFi Router No.1**

IP CONVERTER ROUTER FOR AIRTEL NET TO HGWL LAN

WAN: 182.75.17.18

LAN: 192.168.0.1

Password : hgwl@123456

My Internet Connection is :	Static IP 🗸
TATIC IP ADDRESS INTER	RNET CONNECTION TYPE
nter the static address inform	nation provided by your Internet Service Provider (ISP).
IP Address :	182,75,17,19
Subnet Mask :	255.255.255.248
Default Gateway :	182.75.17.17
MAC Address :	00 - 00 - 00 - 00 - 00 - 00 (optional)
	Copy Your PC's MAC Address
Primary DNS Server :	8.8.8.8
Secondary DNS Server :	4.2.2.2 (optional)
MTU:	1500 bytes MTU default 1500
se this section to configure the in Infigured here is the IP Address t Iange the IP Address here, you m	iternal network settings of your router. The IP Address that is that you use to access the Web-based management interface. If you nay need to adjust your PC's network settings to access the network
e this section to configure the in nfigured here is the IP Address t ange the IP Address here, you m ain.	that you use to access the Web-based management interface. If you nay need to adjust your PC's network settings to access the network
e this section to configure the in nfigured here is the IP Address t ange the IP Address here, you m ain. Router IP Address:	that you use to access the Web-based management interface. If you nay need to adjust your PC's network settings to access the network
se this section to configure the in infigured here is the IP Address t lange the IP Address here, you m lain. Router IP Address:	that you use to access the Web-based management interface. If you nay need to adjust your PC's network settings to access the network     192.168.0.1     255.255.0
e this section to configure the in nfigured here is the IP Address t ange the IP Address here, you m ain. Router IP Address: Subnet Mask :	that you use to access the Web-based management interface. If you nay need to adjust your PC's network settings to access the network    192.168.0.1   255.255.255.0
e this section to configure the in nfigured here is the IP Address t ange the IP Address here, you m ain. Router IP Address: Subnet Mask : Local Domain Name : Enable DNS Relay :	that you use to access the Web-based management interface. If you nay need to adjust your PC's network settings to access the network    192.168.0.1   255.255.255.0
e this section to configure the in infigured here is the IP Address t lange the IP Address here, you m jain. Router IP Address: Subnet Mask : Local Domain Name ; Enable DNS Relay : HCP SERVER SETTINGS se this section to configure the bu	that you use to access the Web-based management interface. If you nay need to adjust your PC's network settings to access the network    192.168.0.1   255.255.255.0
se this section to configure the in onfigured here is the IP Address t hange the IP Address here, you m gain. Router IP Address: Subnet Mask : Local Domain Name ; Enable DNS Relay : HCP SERVER SETTINGS se this section to configure the bu	that you use to access the Web-based management interface. If you nay need to adjust your PC's network settings to access the network    192.168.0.1   255.255.0   Image: Comparison of the computer of the computers on your
onfigured here is the IP Address thange the IP Address here, you m gain. Router IP Address: Subnet Mask : Local Domain Name : Enable DNS Relay : DHCP SERVER SETTINGS Ise this section to configure the bu etwork.	that you use to access the Web-based management interface. If you nay need to adjust your PC's network settings to access the network    192.168.0.1   255.255.255.0   Image: Comparison of the computers of the computers on your

# HGWL MAIN ROUTER D-Link WiFi Router No.2

WAN: 192.168.0.2 (STATIC) LAN: 192.168.1.1

#### COMMON TO BOTH INTERNET CONNECTION (FOR INTERNET 1&2 COMMON WAN INPUT) LAN -1 Connector is for HGWL LAN DISTRIBUTION to all 32 Clients

#### **Password : Blank**

WAN Interface		
WAN Access Type:	Static IP	~
IP Address:	192.168.0.2	
Subnet Mask:	255.255.255.0	
Default Gateway:	192.168.0.1	
MTU Size:	1500	
DNS Server 1:	8.8.8.8	
DNS Server 2:	4.2.2.2	(Optional

LAN Interface Setup			
IP Address:	192.168.1.1		
Subnet Mask:	255.255.255.0		

HGWL MAIN OFFICE D-Link WiFi Router No.3 LAN IP Address: 192.168.1.2

HGWL ADM BUILDING CHINEES GUEST HOUSE D-Link WiFi Router No.4 LAN IP Address: 192.168.1.3

HGWL MAIN STORE D-Link WiFi Router No.5 LAN IP Address: 192.168.1.4